

INSTRUCTIONS ON HOW TO CLEAN YOUR SLING AND STRAP FURNITURE

Outdoor furniture should be cleaned periodically with a multipurpose cleaner that we recommend, Casual Clean. Routine cleaning will help enhance the appearance and extend the life of your patio furniture, cushions and umbrellas. This product attacks the sun-baked dirt and mildew stains. Dilute with water for less difficult cleaning jobs.

How to clean:

Slings and umbrellas:

Hose down. Dilute 1 part of <u>Casual Clean Multipurpose Cleaner</u> to 5 parts of water. Scrub using a <u>nylon brush</u>, sponge or a cloth. Rinse thoroughly and leave in sun to dry. To prolong the life and beauty of your fabric we recommend that a towel be placed over the sling and cushion fabric when using any tanning or insect repellent products. Should any of these products come in contact with the fabric, wash and rinse immediately as noted above.

Vinyl strap furniture:

Hose down. Spray on or apply full strength of <u>Casual Clean Multipurpose Cleaner</u> directly to surface. Scrub using a <u>nylon brush</u> or cloth. Rinse thoroughly and leave it in sun to dry.

Fabric Cushions and umbrellas:

Dilute 1 part of <u>Casual Clean Multipurpose Cleaner</u> to 10 parts of water. Test for color fasteners on small section of fabric before cleaning the entire piece. Hose down fabric and scrub using a <u>nylon brush</u>. Rinse thoroughly and leave it in sun to dry.

IMPORTANT:

Do not use bleach, solvent-based cleaners, or water temperature of 100 degrees. Do not put sling, cushion or umbrella in the swimming pool.