



How to install double wrap strap

INSTRUCTIONS ON HOW TO INSTALL DOUBLE WRAP STRAP



Tools needed to complete this task: See Pic.1

- ✓ Pot of warm water (just under boiling point)
- ✓ Scissors
- ✓ Tape measure
- ✓ Hole puncher (if you will cut your own strap)
- ✓ Hammer or rubber mallet (optional)
- ✓ Gloves

Place the straps inside the pot and wait for 5 minutes before installing.

We recommend wearing gloves to protect your hands, and when you are ready to start, use tongs (optional) to grab and install one strap at a time.

Once you remove the strap from the water, you have to install it right away, otherwise it will cool down and harden.

Step one: Attach strap to one side of the frame



Push the rivet into both strap.

Insert the rivet into the hole of one side of the chair frame and if necessary use a hammer to tap it in. as shown in (Pic.2)




How to install double wrap strap

Step two: Wrap strap around the frame



Wrap the strap around the frame twice.
as shown in (Pic.3)

Step three: Pull strap

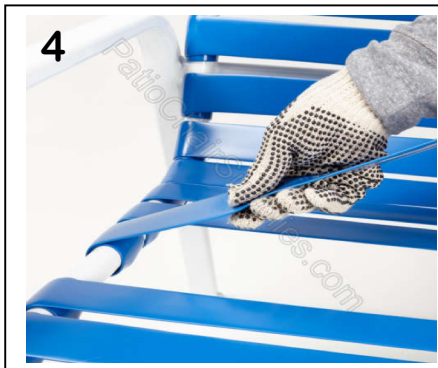

Stretch and pull the strap
over the opposite side of
the chair frame by 5" as
shown in (Pic.4 and 5)

Step four: Attach strap to the opposite side of the frame



Wrap the strap around
the frame twice (same as
the 1st side) as shown in
(Pic.6 and 7)



How to install double wrap strap

Step five: Adjust strap



If necessary, slide and adjust the strap as shown in (Pic.8 and 9)